







---







**LC RF CONTROL 24V RGBW/TW**



---

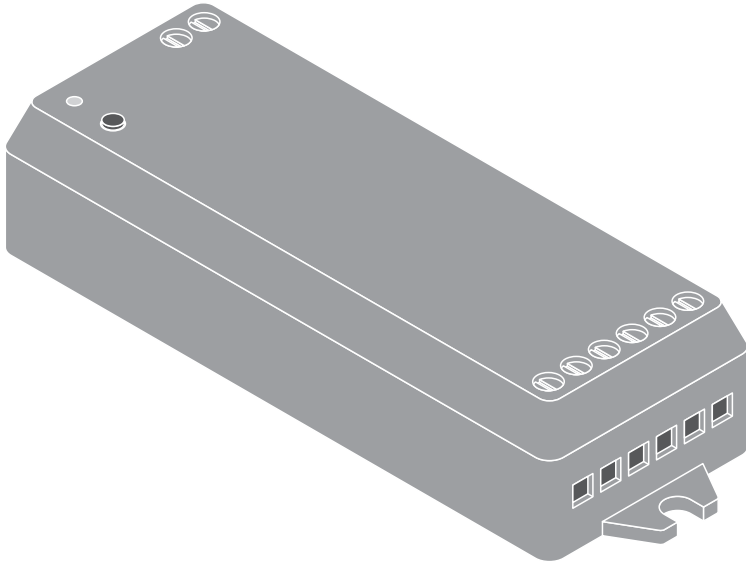

	EAN	l x w x h [mm]	V	Input signal	IP	°C
LC RF CONTROL 24V RGBW/TW	4058075435834	114x38x20	12-24VDC	2.4 GHz	20	-30...+55

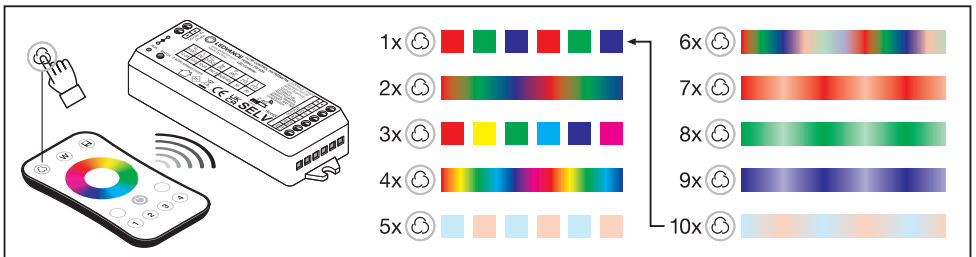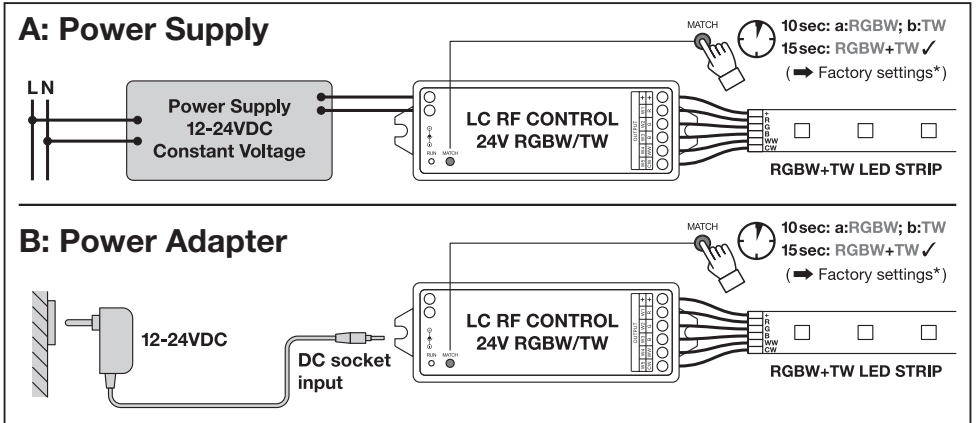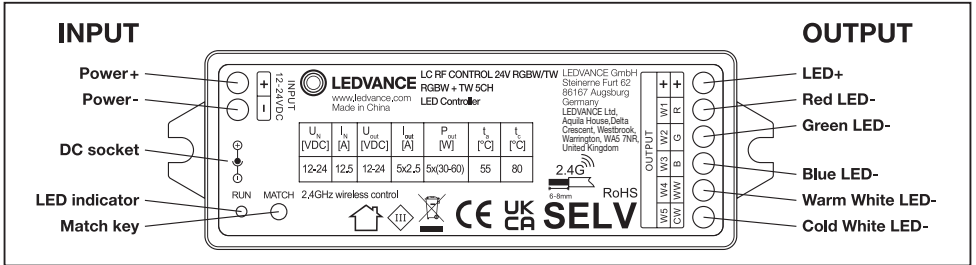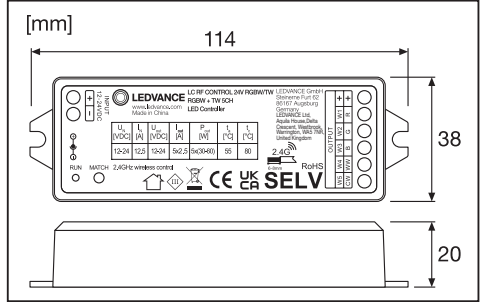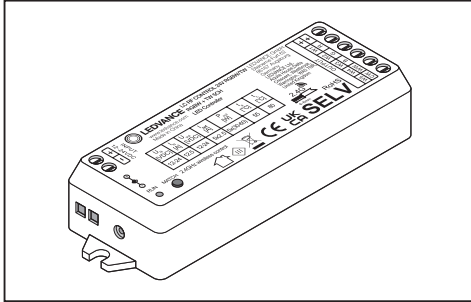

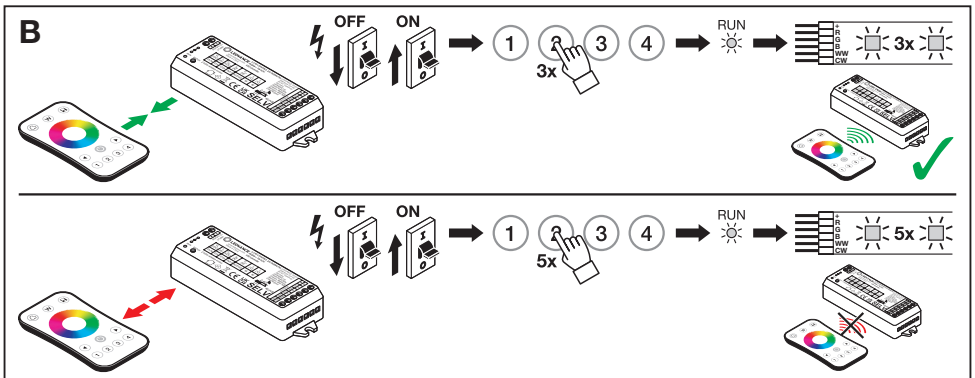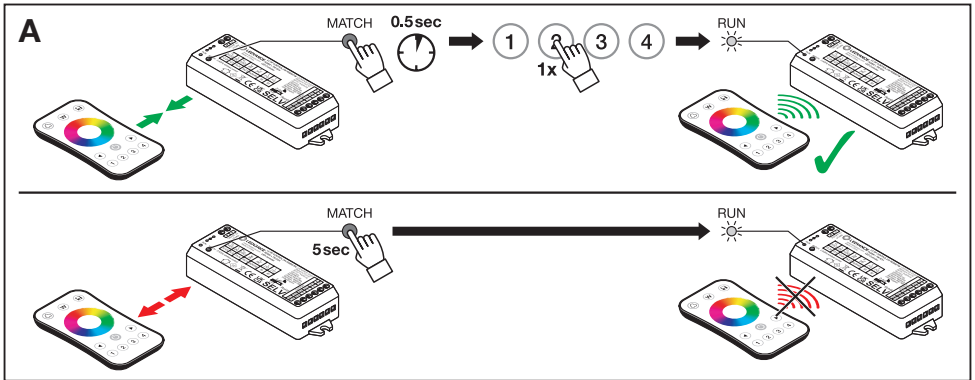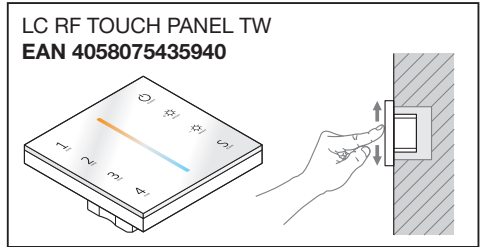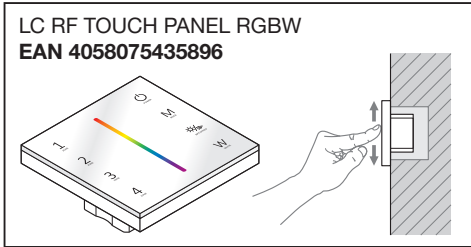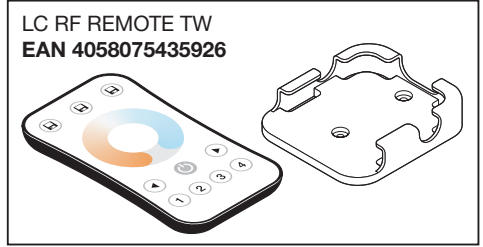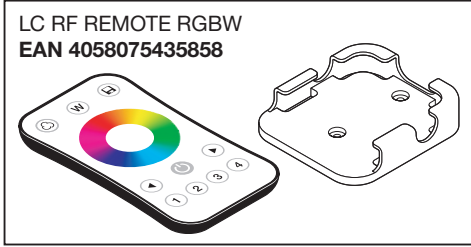

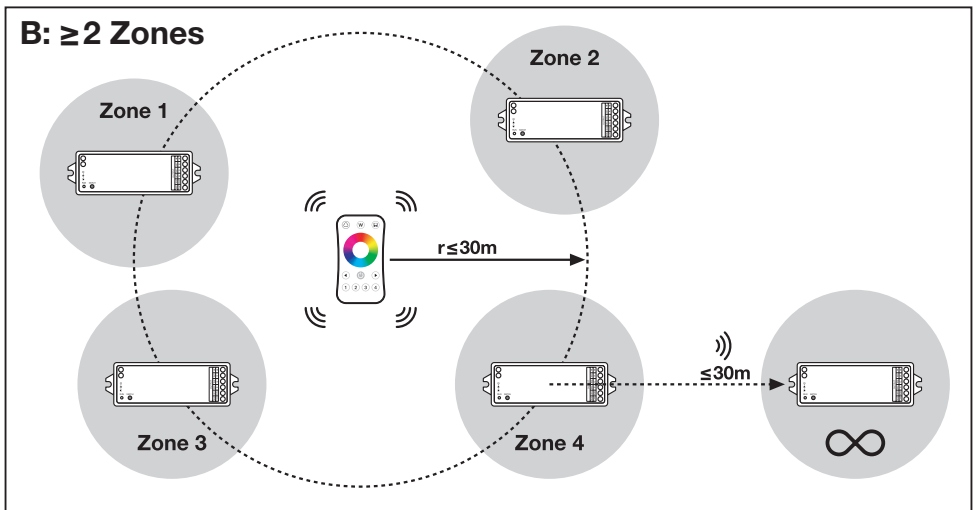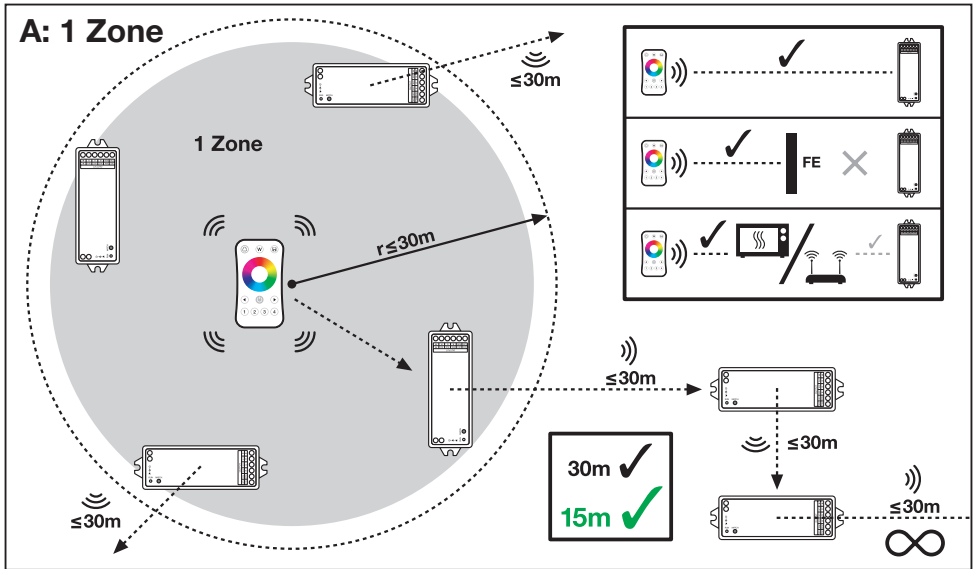

\* Ⓞ ZURÜCKSETZEN Ⓞ RESET Ⓞ RÉINITIALISER Ⓞ RESET Ⓞ RESET Ⓞ REINICIAR Ⓞ ΕΠΑΝΑΦΟΡΑ Ⓞ RESET Ⓞ ÁTERSTÁLLNING Ⓞ NOLLAUS Ⓞ NULLSTILL  
 Ⓞ NULSTIL Ⓞ RESET Ⓞ СБРОСИТЬ Ⓞ RESET Ⓞ RESEŤUJ Ⓞ RESET Ⓞ PONASTAVI Ⓞ SIFIRLAMA Ⓞ PONOVNO POSTAVLJANJE Ⓞ RESETARE Ⓞ ЗАПУ-  
 ЛЯВАНЕ Ⓞ LÄHTESTA Ⓞ ATKURTI Ⓞ АТІЕСТАТІ Ⓞ RESEŤUJ Ⓞ СКІНУТИ Ⓞ ҚАЙТА ОРНАТ

Technische Unterstützung / Technical support: [www.ledvance.com](http://www.ledvance.com)  
 Kundenservicecenter / Service Center: [kundenservice@ledvance.com](mailto:kundenservice@ledvance.com)  
 Deutschland: Tel.: +49 89 780673-660, Fax: +49 89 780670-665  
 Österreich: Tel.: +43 1 68068 118 oder 126, Fax: +43 1 68068 7



LEDVANCE GmbH  
 Steinerne Furt 62  
 86167 Augsburg, Germany  
[www.ledvance.com](http://www.ledvance.com)



C10449057  
 G11145361  
 15.06.22

© LEDVANCE Ltd, Aquila House  
 Delta Crescent, Westbrook, Warrington  
 WA5 7NR, United Kingdom