

Opis produktu

1722-285

Cover frame 2gang yellow - Busch-axcent



Ogólne informacje

Typ produktu	1722-285
Kod zamówieniowy	2CKA001754A4335
Oznaczenie typu ABB	Cover Frame 2gang xxx - Busch-axcent
Numer EAN	4011395113288
Opis katalogowy	Cover frame 2gang yellow - Busch-axcent
Opis	For vertical or horizontal installation.

Installation

Instrukcje i podręczniki	No document needed
Typ montażu	Flush Mounted
Rodzaj mocowania	Clamp
Orientacja montażu	Horizontal Vertical

Dane techniczne

Arkuszy danych, informacja techniczna	No document needed
Liczba	2

Design

Design Range	Busch-axcent 63x63
Design Range Variant	Busch-axcent
Wykończenie pokrywy	Untreated Glossy
Material	Thermoplastic
Zapewnione miejsce na etykiety	No
Kolor RAL	Similar to RAL 1018
Kolor	yellow

Material Compliance

Dane RoHS	2CKA200000E2684
Status RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Deklaracja REACH	2CKA309999E9999
REACH Information	False - does not contains substances > 0.1 mass percentage
Szablon raportowania CMRT	9AKK108468A3363

Normy środowiskowe

Stopień ochrony	IP20
-----------------	------

Wymiary

Szerokość netto	91 mm
Wysokość netto	162 mm
Głębokość / długość netto	11 mm
Masa netto	50.5 g
Schemat wymiarów	2CKA000097E0315

Certyfikaty i deklaracje (Numer dokumentu)

Deklaracja zgodności UE	No declaration needed
-------------------------	-----------------------

Klasyfikacje

ETIM 9	EC000007 - Cover frame for domestic switching devices
--------	---

eClass

V11.0 : 27144001

Kategoria WEEE

Product Not in WEEE Scope

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001731A1916	Rocker None for Pull-cord switch, Pull cord studio white - 63x63	1720-84	1	sztuka
2CKA001710A3808	Cover plate with legend Level switch Turn button studio white - 63x63	1740 DR/03-84	1	sztuka
2CKA001710A3512	Cover plate Symbol "2-1-3" for Level switch, Turn button studio white - 63x63	1740 DRL-84-503	1	sztuka
2CKA001710A3172	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white - 63x63	1740-84	1	sztuka
2CKA001710A3161	Cover plate Blind cap 1 gang with Mounting plate studio white - 63x63	1742-84	1	sztuka
2CKA001710A3991	Cable Outlet / Blank Plate / Adapter Ring Blind cap 0 gang studio white - 63x63	1742-84-500	1	sztuka
2CKA001724A4368	Cover plate SAT 4 gang studio white - 63x63	1743/10-04-84	1	sztuka
2CKA001724A4377	Cover plate TV / Radio / 2x SAT 4 gang studio white - 63x63	1743-04-84	1	sztuka
2CKA001724A4332	Data / Telecommunication / Antenna SAT 3 gang studio white - 63x63	1743-84-500	1	sztuka
2CKA001710A3173	Cover plate Busch-Infoline® telephone connector boxes (VDo) Central cover plate studio white - 63x63	1745-84	1	sztuka
2CKA001710A3993	Data / Telecommunication / Antenna Telecommunication inserts 0 gang studio white - 63x63	1746/10-84-500	1	sztuka
2CKA001710A3167	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang studio white - 63x63	1746-84	1	sztuka
2CKA001710A4096	Intermediate Ring for cover plates Busch-Balance® SI studio white - 63x63	1747 BSI-84	1	sztuka
2CKA001710A3863	Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI studio white - 63x63	1747 SI-84	1	sztuka
2CKA001710A3861	Intermediate Ring studio white - 63x63	1747-84	1	sztuka
2CKA001710A3163	Cover plate Cable outlet studio white - 63x63	1749-84	1	sztuka
2CKA001723A0240	Cover plate Loudspeaker 2 gang studio white - 63x63	1751-84	1	sztuka
2CKA001710A3175	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white - 63x63	1755 SL/PZ-84-101	1	sztuka
2CKA001724A2761	Cover plate with labelling field For data connection housing 2 gang studio white - 63x63	1758-84	1	sztuka
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single push button with Pilot lamp studio white - 63x63	1764 NLI-84	1	sztuka
2CKA001710A3992	Data / Telecommunication / Antenna TAE 0 gang studio white - 63x63	1766-84-500	1	sztuka
2CKA001753A0258	Cover plate with legend 1 ... 15 Min for Time switch, Toggle studio white - 63x63	1770-84-103	1	sztuka
2CKA001753A0301	Cover plate with legend 10 ... 120 Min for Time switch, Toggle studio white - 63x63	1771-84-103	1	sztuka

2CKA001751A2980	Multimedia Devices studio white	1785 ENO-84	1	sztuka
2CKA001751A3099	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA/02-84	1	sztuka
2CKA001751A3088	Mechanical Controls Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA-84-500	1	sztuka
2CKA001751A3128	Mechanical Controls None for Switch/push button, Two-part rocker studio white - 63x63	1785 K-84-500	1	sztuka
2CKA001751A2992	Rocker with legend DND, MUR for Switch/push button, Two-part rocker studio white - 63x63	1785/11-84	1	sztuka
2CKA001751A3076	Mechanical Controls Without imprint for Switch/push button, Two-part rocker studio white - 63x63	1785-84-500	1	sztuka
2CKA001751A2968	Multimedia Devices studio white	1786 ENO-84	1	sztuka
2CKA001751A3098	Rocker with legend Symbol "arrows" for Venetian blind, Single rocker studio white - 63x63	1786 JA/02-84	1	sztuka
2CKA001751A2998	Rocker with legend DND for Switch/push button, Single rocker studio white - 63x63	1786/11-84	1	sztuka
2CKA001751A3074	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1786-84-500	1	sztuka
2CKA001751A2750	Rocker None for Switch/push button, Single rocker studio white - 63x63	1788-84	1	sztuka
2CKA001751A2751	Rocker with legend Heizung for Switch/push button, Single rocker studio white - 63x63	1789 H-84	1	sztuka
2CKA001751A2754	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - 63x63	1789 KI-84	1	sztuka
2CKA001751A3084	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - 63x63	1789 LI-84-500	1	sztuka
2CKA001751A3151	Mechanical Controls for Switch/push button, Single rocker studio white - 63x63	1789 N-84-500	1	sztuka
2CKA001751A3161	Mechanical Controls Various symbols for Switch/push button, Single rocker studio white - 63x63	1789 ST-84-500	1	sztuka
2CKA001751A2755	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - 63x63	1789 TR-84	1	sztuka
2CKA001751A3091	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1789-84-500	1	sztuka
2CKA001710A4113	Cover plate studio white - 63x63	1790-592-84	1	sztuka
2CKA001710A3698	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white - 63x63	1794 TA-84	1	sztuka
2CKA001710A4017	Cover plate Various symbols for Thermostat Turn button studio white - 63x63	1795 HK-84	1	sztuka
2CKA001710A4049	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 HKEA-84	1	sztuka
2CKA001710A3725	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 TA-84	1	sztuka
2CKA001710A3569	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795-84	1	sztuka

2CKA001753A0311	Cover plate for Pull-cord switch, Pull cord studio white - 63x63	1796-84	1	sztuka
2CKA001710A3990	Data / Telecommunication / Antenna Modular Jack 2 gang studio white - 63x63	1800-84-500	1	sztuka
2CKA001710A1551	Data / Telecommunication / Antenna UAE/IAE (ISDN) 2 gang studio white - 63x63	1803-02-84-500	1	sztuka
2CKA001710A1550	Data / Telecommunication / Antenna UAE/IAE (ISDN) 1 gang studio white - 63x63	1803-84-500	1	sztuka
2CKA002013A5407	Busch-Object socket outlet SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	20 EUAB-84	1	sztuka
2CKA002011A6207	Socket Outlets Without imprint studio white - 63x63	20 EUC-84-500	1	sztuka
2CKA002013A5418	Busch-Service-Socket SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	20 EUCBDR-84	1	sztuka
2CKA002013A5286	SCHUKO® socket insert Without imprint Safety Shutter with Control light; LED /Green studio white - 63x63	20 EUCBL-84	1	sztuka
2CKA002013A5294	Busch-steplight SCHUKO® socket insert Without imprint Safety Shutter Protective contact (SCHUKO) with Night light; LED /White studio white - 63x63	20 EUCBLI-84	1	sztuka
2CKA002013A5268	SCHUKO® Socket insert with legend EDV Safety Shutter studio white - 63x63	20 EUCKSDV-84	1	sztuka
2CKA002013A5372	Socket insert Without imprint Safety Shutter Protective contact (SCHUKO) studio white - 63x63	20 EUCKS-84-500	1	sztuka
2CKA002013A5441	20 EUCRB-84-500 Socket Outlet	20 EUCRB-84-500	1	sztuka
2CKA002018A1509	Socket Outlets Without imprint with Hinged Lid studio white - 63x63	20 EUK-84-500	1	sztuka
2CKA002018A1520	SCHUKO® socket insert Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKB-84	1	sztuka
2CKA002018A1529	SCHUKO® socket insert Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKBR-84	1	sztuka
2CKA002018A1540	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNB-84	1	sztuka
2CKA002018A1551	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNBL-84	1	sztuka
2CKA002018A1563	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid and Cylinder Lock with different locking studio white - 63x63	20 EUKNBSL-84	1	sztuka
2CKA002018A1564	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking studio white - 63x63	20 EUKNBSL-84-101	1	sztuka
2CKA002011A6209	Socket Outlets Without imprint studio white - 63x63	20 EUN-84-500	1	sztuka
2CKA001751A3170	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, with LED 1NO studio white - 63x63	2029 UC-84	1	sztuka

2CKA002495A0086	Equipotential socket insert Socket outlet 2-position studio white - 63x63	2095 UC-84	1	sztuka
2CKA002190A0215	2190 EUC-84 Socket Outl. S/F 1g	2190 EUC-84	1	sztuka
2CKA002013A5477	SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	23 EUCB-84	1	sztuka
2CKA002013A5451	SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	2300 EUCB-84	1	sztuka
2CKA002113A0511	2300 UCRKS-84-503 Socket Outl. S	2300 UCRKS-84-503	1	sztuka
2CKA002011A3833	Busch-Protector® SCHUKO® socket insert Without imprint studio white - 63x63	2310 EUGL/VA-84-11	1	sztuka
2CKA002099A0198	2397 UCKS-84-505 Center PI, SF for 2300	2397 UCKS-84-505	1	sztuka
2CKA002013A5361	2398 CKS-84 Cover plate shuttered	2398 CKS-84	1	sztuka
2CKA002099A0214	Socket insert Without imprint Safety Shutter Earthing pin studio white - 63x63	2399 UCKS-84	1	sztuka
2CKA002099A0192	2399 UCKS-84-505 Center PI, SF for 23M	2399 UCKS-84-505	1	sztuka
2CKA001719A0220	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white - 63x63	2518-WD-84	1	sztuka
2CKA001751A3180	Electronic Controls Symbol "bell" for Switch/push button Single rocker studio white - 63x63	2520 KI-84-500	1	sztuka
2CKA001751A3199	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - 63x63	2520 TR-84	1	sztuka
2CKA001724A4256	Cover plate Bore hole 1 gang studio white - 63x63	2533-84	1	sztuka
2CKA001710A3646	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/01-84	1	sztuka
2CKA001710A3651	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/02-84	1	sztuka
2CKA001724A4388	Cover plate Doctor Niebieski studio white - 63x63	2548-022 AR-84	1	sztuka
2CKA001724A4402	Cover plate XLR 1 gang studio white - 63x63	2553-84	1	sztuka
2CKA001753A0394	Cover plate Modular Jack 2 gang studio white - 63x63	2561-02-84	1	sztuka
2CKA001753A0403	Cover plate Modular Jack 1 gang studio white - 63x63	2561-84	1	sztuka
2CKA003116A0662	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA studio white - 63x63	3120 EUCB-84	1	sztuka
2CKA003117A0006	Buschmat RCD - Insert RCD 30 mA studio white - 63x63	3151 UC-84	1	sztuka
2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84-500	1	sztuka
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84-500	1	sztuka
2CKA006132A0379	Reflex SI / Busch-Duro 2000SI for Push Button Coupling Units Horizontal 0 ... 180 ° studio white	6122/10-84-500	1	sztuka
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84-500	1	sztuka
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84-500	1	sztuka
2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84-500	1	sztuka

2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84-500	1	sztuka
2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84-500	1	sztuka
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84-500	1	sztuka
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84-500	1	sztuka
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84-500	1	sztuka
2CKA006430A0400	6430-84-102-500 Control Cover	6430-84-102-500	1	sztuka
2CKA006430A0306	Cover plate with legend Symbol "arrows" and "ok" for Time switch Central cover plate studio white - 63x63	6435-84	1	sztuka
2CKA006400A0059	Cover plate PowerDock 1 gang studio white - 63x63	6477-84	1	sztuka
2CKA006400A0047	Multimedia Devices studio white - solo	6480/11-84-500	1	sztuka
2CKA006400A0045	Multimedia Devices studio white - future linear	6480-84-500	1	sztuka
2CKA006599A3009	6540-84-102-500 Center Pl. SF Dimmer	6540-84-102-500	1	sztuka
2CKA006599A2835	Cover plate None for Cooling Central cover plate studio white - 63x63	6541-84	1	sztuka
2CKA006599A3010	6543-84-101-500 Dimmer Control Cover	6543-84-101-500	1	sztuka
2CKA006599A2908	Control Element None for Dimmer Two-part button with Neon lamp studio white - 63x63	6545-84	1	sztuka
2CKA006710A0011	Kits 4 chan. Zigbee studio white - future linear	6716 UJ-84-500	1	sztuka
2CKA006730A0038	Electronic Controls 1 channel Radio Control studio white - 63x63	6731-84-500	1	sztuka
2CKA006730A0039	Electronic Controls 2 channel Radio Control studio white - 63x63	6732-84-500	1	sztuka
2CKA006730A0040	6733-84-500 RF-Switch Sensor 4-fold	6733-84-500	1	sztuka
2CKA006730A0136	Control Element None for Dimmer Two-part button studio white - 63x63	6736 FoH-84	1	sztuka
2CKA006800A2834	Electronic Controls studio white - 63x63	6815-84-101-500	1	sztuka
2CKA008200A0255	Cover plate with legend Radio 0 gang studio white - 63x63	8252-84-101-500	1	sztuka
2CKA008200A0081	Cover plate Loudspeaker studio white - 63x63	8253-84	1	sztuka
2CKA008300A0225	83260-84-515 Cover plates, Indoor St.	83260-84-515	1	sztuka
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	sztuka
2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	sztuka
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	sztuka
2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	sztuka
2CKA006200A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84-WL	1	sztuka
2CKA006220A0139	SR-1-84 rocker 1gang	SR-1-84	1	sztuka
2CKA006220A0154	SR-2-84 rocker 2gang	SR-2-84	1	sztuka

2CKA006220A0145	SRB-1-84 rocker 1gang, blinds	SRB-1-84	1	sztuka
2CKA006220A0160	SRB-2-84 rocker 2g, blinds	SRB-2-84	1	sztuka
2CKA006220A0151	SRD-1-84 rocker 1gang, dimming	SRD-1-84	1	sztuka
2CKA006220A0166	SRD-2-L-84 rocker 2g, left, dimming	SRD-2-L-84	1	sztuka
2CKA006220A0260	SRD-2-R-84 rocker 2g, right, dimming	SRD-2-R-84	1	sztuka
2CKA006220A0142	SRL-1-84 rocker 1gang, lighting	SRL-1-84	1	sztuka
2CKA006220A0157	SRL-2-L-84 rocker 2g, left, lighting	SRL-2-L-84	1	sztuka
2CKA006220A0169	SRL-2-R-84 rocker 2g, right, lighting	SRL-2-R-84	1	sztuka
2CKA006220A0148	SRS-1-84 rocker 1gang, scene	SRS-1-84	1	sztuka
2CKA006220A0163	SRS-2-L-84 rocker 2gang, left, scene	SRS-2-L-84	1	sztuka
2CKA006220A0175	SRS-2-R-84 rocker 2g, right, scene	SRS-2-R-84	1	sztuka

Kategorie

Produkty niskiego napięcia i systemy → Wiring Accessories - Light Switch Ranges → Frames



380