
Opis produktu

1723-288

Cover frame 3gang blue - Busch-axcent



Ogólne informacje

Typ produktu	1723-288
Kod zamówieniowy	2CKA001754A4345
Oznaczenie typu ABB	Cover Frame 3gang xxx - Busch-axcent
Numer EAN	4011395113394
Opis katalogowy	Cover frame 3gang blue - Busch-axcent
Opis	For vertical or horizontal installation.

Installation

Instrukcje i podręczniki	No document needed
Typ montażu	Flush Mounted
Rodzaj mocowania	Clamp
Orientacja montażu	Horizontal Vertical

Dane techniczne

Arkusze danych, informacja techniczna	No document needed
---------------------------------------	--------------------

Liczba

3

Design

Design Range	Busch-axcent 63x63
Design Range Variant	Busch-axcent
Wykończenie pokrywy	Untreated Glossy
Material	Thermoplastic
Zapewnione miejsce na etykiety	No
Kolor RAL	RAL 5002 - Ultramarine Blue
Kolor	blue

Material Compliance

Dane RoHS	2CKA200000E2694
Status RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Deklaracja REACH	2CKA309999E9999
REACH Information	False - does not contains substances > 0.1 mass percentage
Szablon raportowania CMRT	9AKK108468A3363

Normy środowiskowe

Stopień ochrony	IP20
-----------------	------

Wymiary

Szerokość netto	91 mm
Wysokość netto	233 mm
Głębokość / długość netto	11 mm
Masa netto	67 g
Schemat wymiarów	2CKA000097E0323

Certyfikaty i deklaracje (Numer dokumentu)

Deklaracja zgodności UE	No declaration needed
-------------------------	-----------------------

Klasyfikacje

ETIM 9	EC000007 - Cover frame for domestic switching devices
eClass	V11.0 : 27144001
Kategoria WEEE	Product Not in WEEE Scope

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
------------	-------------	------	----------	-----------------

2CKA001731A1916	Rocker None for Pull-cord switch, Pull cord studio white - 63x63	1720-84	1	sztuka
2CKA001710A3808	Cover plate with legend Level switch Turn button studio white - 63x63	1740 DR/03-84	1	sztuka
2CKA001710A3512	Cover plate Symbol "2-1-3" for Level switch, Turn button studio white - 63x63	1740 DRL-84-503	1	sztuka
2CKA001710A3172	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white - 63x63	1740-84	1	sztuka
2CKA001710A3161	Cover plate Blind cap 1 gang with Mounting plate studio white - 63x63	1742-84	1	sztuka
2CKA001710A3991	Cable Outlet / Blank Plate / Adapter Ring Blind cap 0 gang studio white - 63x63	1742-84-500	1	sztuka
2CKA001724A4368	Cover plate SAT 4 gang studio white - 63x63	1743/10-04-84	1	sztuka
2CKA001724A4377	Cover plate TV / Radio / 2x SAT 4 gang studio white - 63x63	1743-04-84	1	sztuka
2CKA001724A4332	Data / Telecommunication / Antenna SAT 3 gang studio white - 63x63	1743-84-500	1	sztuka
2CKA001710A3173	Cover plate Busch-Infoline® telephone connector boxes (VDo) Central cover plate studio white - 63x63	1745-84	1	sztuka
2CKA001710A3993	Data / Telecommunication / Antenna Telecommunication inserts 0 gang studio white - 63x63	1746/10-84-500	1	sztuka
2CKA001710A3167	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm 1 gang studio white - 63x63	1746-84	1	sztuka
2CKA001710A4096	Intermediate Ring for cover plates Busch-Balance® SI studio white - 63x63	1747 BSI-84	1	sztuka
2CKA001710A3863	Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI studio white - 63x63	1747 SI-84	1	sztuka
2CKA001710A3861	Intermediate Ring studio white - 63x63	1747-84	1	sztuka
2CKA001710A3163	Cover plate Cable outlet studio white - 63x63	1749-84	1	sztuka
2CKA001723A0240	Cover plate Loudspeaker 2 gang studio white - 63x63	1751-84	1	sztuka
2CKA001710A3175	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white - 63x63	1755 SL/PZ-84-101	1	sztuka
2CKA001724A2761	Cover plate with labelling field For data connection housing 2 gang studio white - 63x63	1758-84	1	sztuka
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single push button with Pilot lamp studio white - 63x63	1764 NLI-84	1	sztuka
2CKA001710A3992	Data / Telecommunication / Antenna TAE 0 gang studio white - 63x63	1766-84-500	1	sztuka
2CKA001753A0258	Cover plate with legend 1 ... 15 Min for Time switch, Toggle studio white - 63x63	1770-84-103	1	sztuka
2CKA001753A0301	Cover plate with legend 10 ... 120 Min for Time switch, Toggle studio white - 63x63	1771-84-103	1	sztuka
2CKA001751A2980	Multimedia Devices studio white	1785 ENO-84	1	sztuka
2CKA001751A3099	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA/02-84	1	sztuka
2CKA001751A3088	Mechanical Controls Symbol "arrows" for Venetian blind, Two-part rocker studio white - 63x63	1785 JA-84-500	1	sztuka
2CKA001751A3128	Mechanical Controls None for Switch/push button, Two-part rocker studio white - 63x63	1785 K-84-500	1	sztuka
2CKA001751A2992	Rocker with legend DND, MUR for Switch/push button, Two-part rocker studio white - 63x63	1785/11-84	1	sztuka
2CKA001751A3076	Mechanical Controls Without imprint for Switch/push button, Two-part rocker studio white - 63x63	1785-84-500	1	sztuka
2CKA001751A2968	Multimedia Devices studio white	1786 ENO-84	1	sztuka

2CKA001751A3098	Rocker with legend Symbol "arrows" for Venetian blind, Single rocker studio white - 63x63	1786 JA/02-84	1	sztuka
2CKA001751A2998	Rocker with legend DND for Switch/push button, Single rocker studio white - 63x63	1786/11-84	1	sztuka
2CKA001751A3074	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1786-84-500	1	sztuka
2CKA001751A2750	Rocker None for Switch/push button, Single rocker studio white - 63x63	1788-84	1	sztuka
2CKA001751A2751	Rocker with legend Heizung for Switch/push button, Single rocker studio white - 63x63	1789 H-84	1	sztuka
2CKA001751A2754	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - 63x63	1789 KI-84	1	sztuka
2CKA001751A3084	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - 63x63	1789 LI-84-500	1	sztuka
2CKA001751A3151	Mechanical Controls for Switch/push button, Single rocker studio white - 63x63	1789 N-84-500	1	sztuka
2CKA001751A3161	Mechanical Controls Various symbols for Switch/push button, Single rocker studio white - 63x63	1789 ST-84-500	1	sztuka
2CKA001751A2755	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - 63x63	1789 TR-84	1	sztuka
2CKA001751A3091	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1789-84-500	1	sztuka
2CKA001710A4113	Cover plate studio white - 63x63	1790-592-84	1	sztuka
2CKA001710A3698	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white - 63x63	1794 TA-84	1	sztuka
2CKA001710A4017	Cover plate Various symbols for Thermostat Turn button studio white - 63x63	1795 HK-84	1	sztuka
2CKA001710A4049	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 HKEA-84	1	sztuka
2CKA001710A3725	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795 TA-84	1	sztuka
2CKA001710A3569	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - 63x63	1795-84	1	sztuka
2CKA001753A0311	Cover plate for Pull-cord switch, Pull cord studio white - 63x63	1796-84	1	sztuka
2CKA001710A3990	Data / Telecommunication / Antenna Modular Jack 2 gang studio white - 63x63	1800-84-500	1	sztuka
2CKA001710A1551	Data / Telecommunication / Antenna UAE/IAE (ISDN) 2 gang studio white - 63x63	1803-02-84-500	1	sztuka
2CKA001710A1550	Data / Telecommunication / Antenna UAE/IAE (ISDN) 1 gang studio white - 63x63	1803-84-500	1	sztuka
2CKA002013A5407	Busch-Object socket outlet SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	20 EUAB-84	1	sztuka
2CKA002011A6207	Socket Outlets Without imprint studio white - 63x63	20 EUC-84-500	1	sztuka
2CKA002013A5418	Busch-Service-Socket SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	20 EUCBDR-84	1	sztuka
2CKA002013A5286	SCHUKO® socket insert Without imprint Safety Shutter withControl light; LED /Green studio white - 63x63	20 EUCBL-84	1	sztuka
2CKA002013A5294	Busch-steplight SCHUKO® socket insert Without imprint Safety Shutter Protective contact (SCHUKO) withNight light; LED /White studio white - 63x63	20 EUCBLI-84	1	sztuka

 
2CKA002013A5268	SCHUKO® Socket insert with legend EDV Safety Shutter studio white - 63x63	20 EUCKS/DV-84	1	sztuka
2CKA002013A5372	Socket insert Without imprint Safety Shutter Protective contact (SCHUKO) studio white - 63x63	20 EUCKS-84-500	1	sztuka
2CKA002013A5441	20 EUCRB-84-500 Socket Outlet	20 EUCRB-84-500	1	sztuka
2CKA002018A1509	Socket Outlets Without imprint with Hinged Lid studio white - 63x63	20 EUK-84-500	1	sztuka
2CKA002018A1520	SCHUKO® socket insert Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKB-84	1	sztuka
2CKA002018A1529	SCHUKO® socket insert Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKBR-84	1	sztuka
2CKA002018A1540	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNB-84	1	sztuka
2CKA002018A1551	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid studio white - 63x63	20 EUKNBL-84	1	sztuka
2CKA002018A1563	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid and Cylinder Lock with different locking studio white - 63x63	20 EUKNBSL-84	1	sztuka
2CKA002018A1564	SCHUKO® Socket insert with labelling field Without imprint Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking studio white - 63x63	20 EUKNBSL-84-101	1	sztuka
2CKA002011A6209	Socket Outlets Without imprint studio white - 63x63	20 EUN-84-500	1	sztuka
2CKA001751A3170	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, with LED 1NO studio white - 63x63	2029 UC-84	1	sztuka
2CKA002495A0086	Equipotential socket insert Socket outlet 2-position studio white - 63x63	2095 UC-84	1	sztuka
2CKA002190A0215	2190 EUC-84 Socket Outl. S/F 1g	2190 EUC-84	1	sztuka
2CKA002013A5477	SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	23 EUCEB-84	1	sztuka
2CKA002013A5451	SCHUKO® socket insert Without imprint Safety Shutter studio white - 63x63	2300 EUCEB-84	1	sztuka
2CKA002113A0511	2300 UCRKS-84-503 Socket Outl. S	2300 UCRKS-84-503	1	sztuka
2CKA002011A3833	Busch-Protector® SCHUKO® socket insert Without imprint studio white - 63x63	2310 EUGL/VA-84-11	1	sztuka
2CKA002099A0198	2397 UCKS-84-505 Center PI, SF for 2300	2397 UCKS-84-505	1	sztuka
2CKA002013A5361	2398 CKS-84 Cover plate shuttered	2398 CKS-84	1	sztuka
2CKA002099A0214	Socket insert Without imprint Safety Shutter Earthing pin studio white - 63x63	2399 UCKS-84	1	sztuka
2CKA002099A0192	2399 UCKS-84-505 Center PI, SF for 23M	2399 UCKS-84-505	1	sztuka
2CKA001719A0220	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white - 63x63	2518-WD-84	1	sztuka
2CKA001751A3180	Electronic Controls Symbol "bell" for Switch/push button Single rocker studio white - 63x63	2520 KI-84-500	1	sztuka
2CKA001751A3199	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - 63x63	2520 TR-84	1	sztuka
2CKA001724A4256	Cover plate Bore hole 1 gang studio white - 63x63	2533-84	1	sztuka
2CKA001710A3646	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/01-84	1	sztuka
2CKA001710A3651	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white - 63x63	2542 DR/02-84	1	sztuka

2CKA001724A4388	Cover plate Doctor Niebieski studio white - 63x63	2548-022 AR-84	1	sztuka
2CKA001724A4402	Cover plate XLR 1 gang studio white - 63x63	2553-84	1	sztuka
2CKA001753A0394	Cover plate Modular Jack 2 gang studio white - 63x63	2561-02-84	1	sztuka
2CKA001753A0403	Cover plate Modular Jack 1 gang studio white - 63x63	2561-84	1	sztuka
2CKA003116A0662	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA studio white - 63x63	3120 EUCB-84	1	sztuka
2CKA003117A0006	Buschmat RCD - Insert RCD 30 mA studio white - 63x63	3151 UC-84	1	sztuka
2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84-500	1	sztuka
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84-500	1	sztuka
2CKA006132A0379	Reflex SI / Busch-Duro 2000SI for Push Button Coupling Units Horizontal 0 ... 180 ° studio white	6122/10-84-500	1	sztuka
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84-500	1	sztuka
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84-500	1	sztuka
2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84-500	1	sztuka
2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84-500	1	sztuka
2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84-500	1	sztuka
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84-500	1	sztuka
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84-500	1	sztuka
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84-500	1	sztuka
2CKA006430A0400	6430-84-102-500 Control Cover	6430-84-102-500	1	sztuka
2CKA006430A0306	Cover plate with legend Symbol "arrows" and "ok" for Time switch Central cover plate studio white - 63x63	6435-84	1	sztuka
2CKA006400A0059	Cover plate PowerDock 1 gang studio white - 63x63	6477-84	1	sztuka
2CKA006400A0047	Multimedia Devices studio white - solo	6480/11-84-500	1	sztuka
2CKA006400A0045	Multimedia Devices studio white - future linear	6480-84-500	1	sztuka
2CKA006599A3009	6540-84-102-500 Center Pl. SF Dimmer	6540-84-102-500	1	sztuka
2CKA006599A2835	Cover plate None for Cooling Central cover plate studio white - 63x63	6541-84	1	sztuka
2CKA006599A3010	6543-84-101-500 Dimmer Control Cover	6543-84-101-500	1	sztuka
2CKA006599A2908	Control Element None for Dimmer Two-part button with Neon lamp studio white - 63x63	6545-84	1	sztuka
2CKA006710A0011	Kits 4 chan. Zigbee studio white - future linear	6716 UJ-84-500	1	sztuka
2CKA006730A0038	Electronic Controls 1 channel Radio Control studio white - 63x63	6731-84-500	1	sztuka
2CKA006730A0039	Electronic Controls 2 channel Radio Control studio white - 63x63	6732-84-500	1	sztuka
2CKA006730A0040	6733-84-500 RF-Switch Sensor 4-fold	6733-84-500	1	sztuka
2CKA006730A0136	Control Element None for Dimmer Two-part button studio white - 63x63	6736 FoH-84	1	sztuka

2CKA006800A2834	Electronic Controls studio white - 63x63	6815-84-101-500	1	sztuka
2CKA008200A0255	Cover plate with legend Radio 0 gang studio white - 63x63	8252-84-101-500	1	sztuka
2CKA008200A0081	Cover plate Loudspeaker studio white - 63x63	8253-84	1	sztuka
2CKA008300A0225	83260-84-515 Cover plates, Indoor St.	83260-84-515	1	sztuka
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	sztuka
2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	sztuka
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	sztuka
2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	sztuka
2CKA006200A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84-WL	1	sztuka
2CKA006220A0139	SR-1-84 rocker 1gang	SR-1-84	1	sztuka
2CKA006220A0154	SR-2-84 rocker 2gang	SR-2-84	1	sztuka
2CKA006220A0145	SRB-1-84 rocker 1gang, blinds	SRB-1-84	1	sztuka
2CKA006220A0160	SRB-2-84 rocker 2g, blinds	SRB-2-84	1	sztuka
2CKA006220A0151	SRD-1-84 rocker 1gang, dimming	SRD-1-84	1	sztuka
2CKA006220A0166	SRD-2-L-84 rocker 2g, left, dimming	SRD-2-L-84	1	sztuka
2CKA006220A0260	SRD-2-R-84 rocker 2g, right, dimming	SRD-2-R-84	1	sztuka
2CKA006220A0142	SRL-1-84 rocker 1gang, lighting	SRL-1-84	1	sztuka
2CKA006220A0157	SRL-2-L-84 rocker 2g, left, lighting	SRL-2-L-84	1	sztuka
2CKA006220A0169	SRL-2-R-84 rocker 2g, right, lighting	SRL-2-R-84	1	sztuka
2CKA006220A0148	SRS-1-84 rocker 1gang, scene	SRS-1-84	1	sztuka
2CKA006220A0163	SRS-2-L-84 rocker 2gang, left, scene	SRS-2-L-84	1	sztuka
2CKA006220A0175	SRS-2-R-84 rocker 2g, right, scene	SRS-2-R-84	1	sztuka

Kategorie

Produkty niskiego napięcia i systemy → Wiring Accessories - Light Switch Ranges → Frames





300