


Mosaic™
LV/ELV anti-extraction module - antimicrobial*

Cat. No(s): 0 770 80

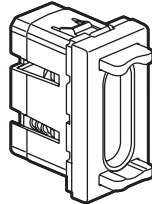

1. USE

When used with a socket, avoids accidental unplugging of sensitive electrical equipment, (photocopier, fax, server, medical equipment ...), by gripping the cord.

This product is made of silver-ion based antimicrobial* material. This technology eliminates bacteria, fungi and viruses without creating any immunisation or resistance effects (physical, rather than chemical, destruction).

Particularly suitable for healthcare establishments (hospitals, clinics, nursing homes, laboratories, waiting rooms, etc.) and more generally for areas subject to hygiene restrictions (industrial, shared and restaurant kitchens, waste, etc.).


This product offers an additional way of ensuring the non-proliferation of bacteria, fungi and viruses without interfering with cleaning protocols. The mechanism can be flush-mounted or surface-mounted.

Fixing with clips.

2. RANGE


Description	White antimicrobial*
Module anti-arrachement - 1 module Pour cordons Ø 4 à Ø 8 mm Can withstand an extraction force of 350 N	0 770 80

3. DIMENSIONS (mm)

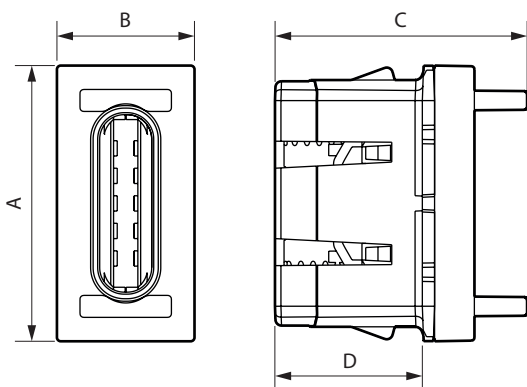


A	B	C	D
45	22.5	41.5	24

4. FUNCTION

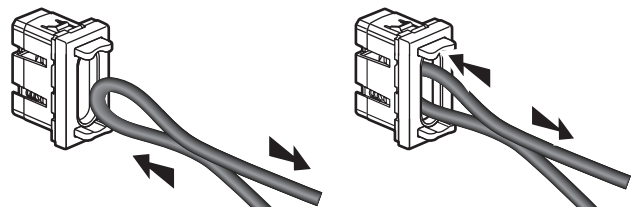

Make a loop when inserting the cable

To remove the cable:
Press the pushbutton and pull on the cable.

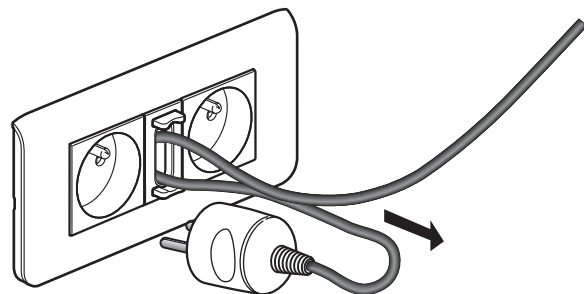

5. TECHNICAL CHARACTERISTICS

■ **5.1 Mechanical characteristics**

Impact resistance: IK 04
 Penetration against solid bodies and liquids: IP 20

■ **5.2 Material characteristics**

Base: Polycarbonate
 Cover plate: Polycarbonate White RAL 9003 + antimicrobial* surface treatment.

Halogen-free
 UV-resistant
 Self-extinguishing: 650°C/30 s

■ **5.3 Climate characteristics**

Storage temperature: - 10°C to + 70°C
 Usage temperature: - 5°C to + 35°C

LV/ELV anti-extraction module - antimicrobial***6. CLEANING**

Clean the surface with a cloth.

Do not use acetone, tar-removing cleaning agents or trichloroethylene.

■ 6.1 Resistance to cleaning products

Resistant to the following products: hexane (EN60669-1), methylated spirit, soapy water, diluted ammonia, bleach diluted to 10%, window-cleaning products, pre-impregnated wipes.

■ 6.2 Resistance to hospital grade cleaning products

Resistant to the following products: Anios, Surfanios, Bactilyline, diluted hydrogen peroxide (35%).

Caution: Always test before using other special cleaning products.

7. STANDARDS AND APPROVALS

Comply with installation and manufacturing standards.

See e-catalogue.

*Contains silver ions that limit the development of bacteria on the surface.